

COROPLAST SIGN INSTALLATION TIPS & HINTS

1. Align wire stake with the flutes that are closest to the alignment dots on face of the sign. If the sign does not have alignment dots, use your best judgement.
2. Slide stake into sign. Note: Stake should slide in easily. The incorrect photo below shows the result of the wire frames placed one hole farther apart than necessary.

Correct




Incorrect




3. Press stake into the ground by pressing foot on the lower rod. Note: For best results alternate pressure from left to right until lower rod is level with the ground.

ADDITIONAL TIPS:

- Horizontal flutes are recommended for use with wood stakes, plastic stakes and tree installation.
- For wire stake installation, vertical flutes are necessary.

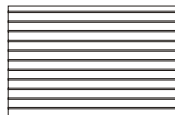

Horizontal

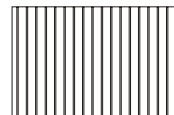

Vertical

- When installing signs using wooden or plastic stakes, make sure stakes are in the ground at least 10 inches.
- Placing a sign less than three feet from roadway may cause it to lean due to draft from passing vehicles.
- In very hard soil, a cordless drill and a long (8" x 1/4") drill bit can be used to pre-drill the holes for the 'H' stakes.